



Hardware Installation Guide

1. Connect IR kit to edge-connect of AIO
2. Connect power splitter to AIO

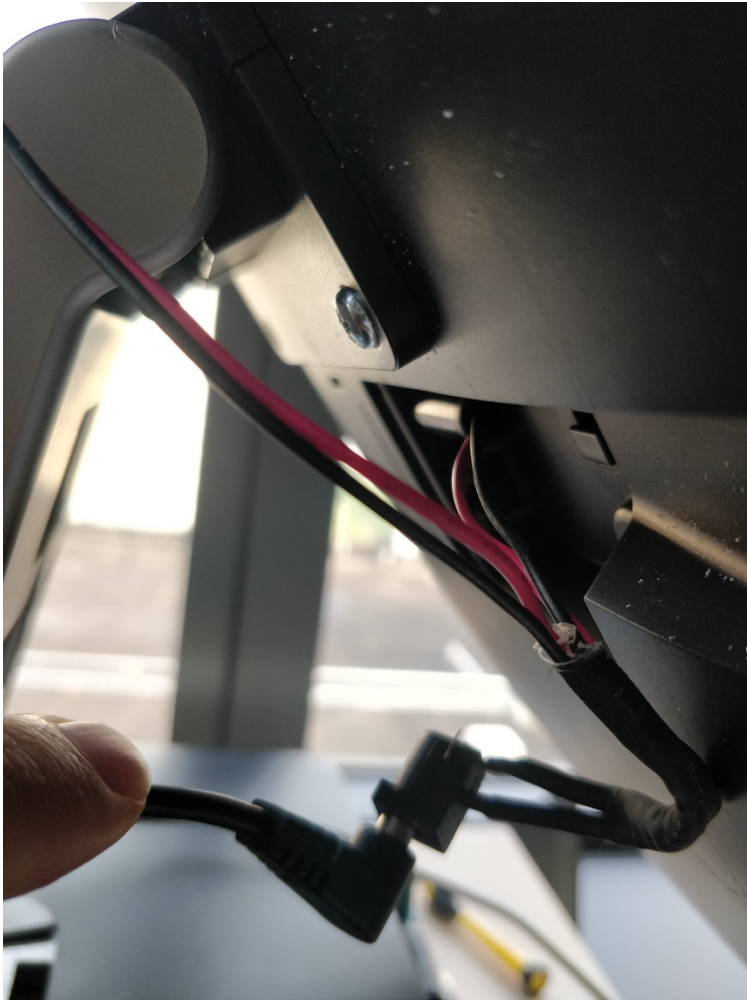


3. If you are using Windows, please install driver for IR Camera on windows.


a. Run "Inf-wizard.exe" as administrator

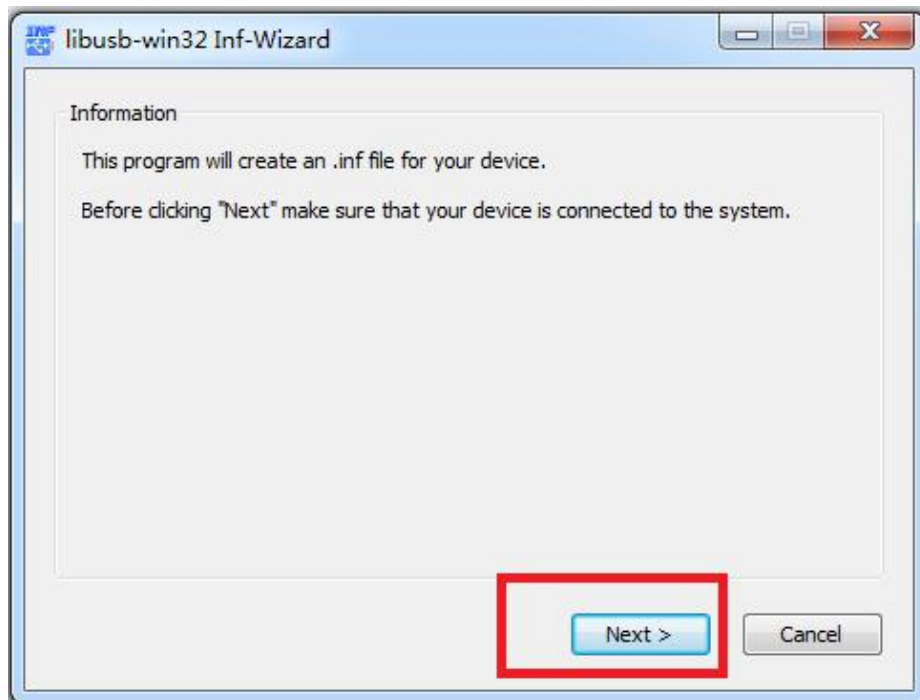


b. Press "Next"

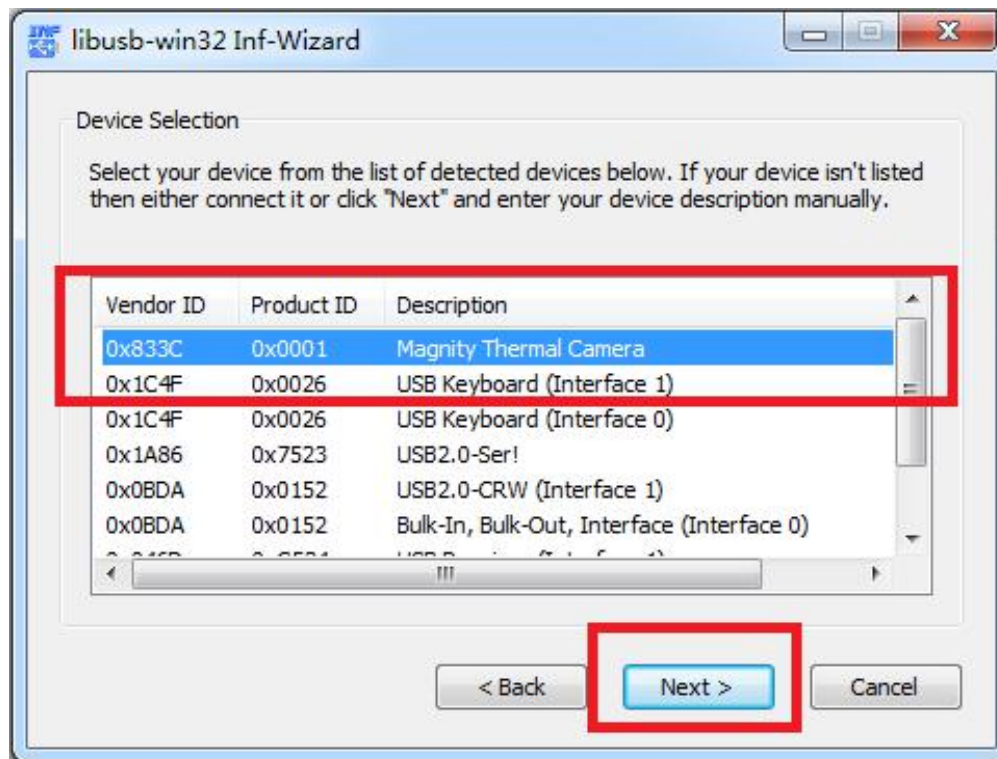


c. Select device (Vendor ID = 0x833C, Product ID = 0x0001). Press “Next”

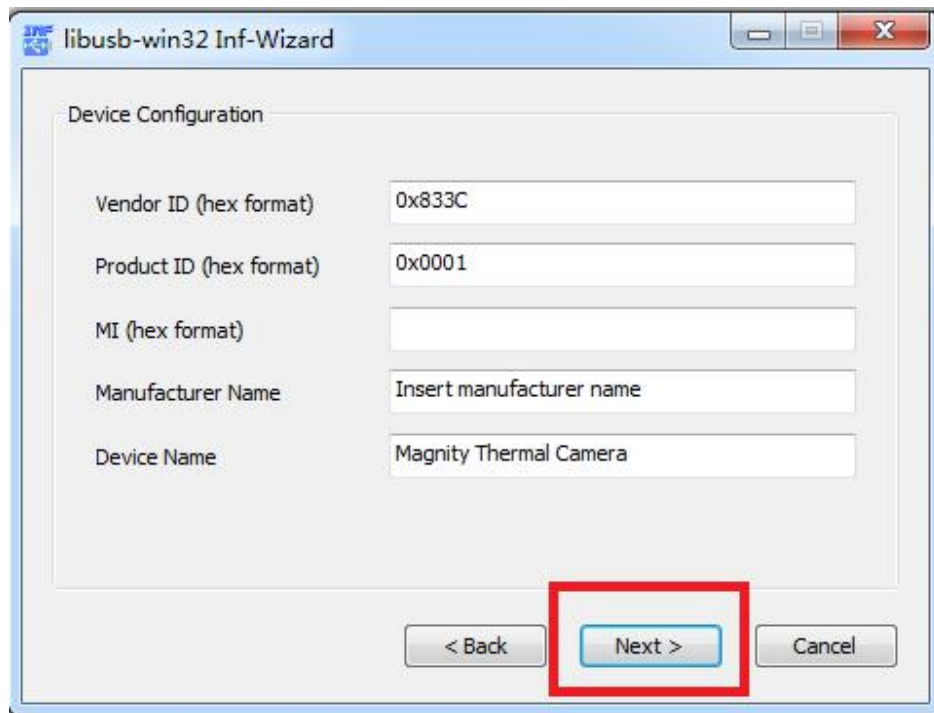

d. Select “Magnity_Thermal_Camera.inf” under x64 folder

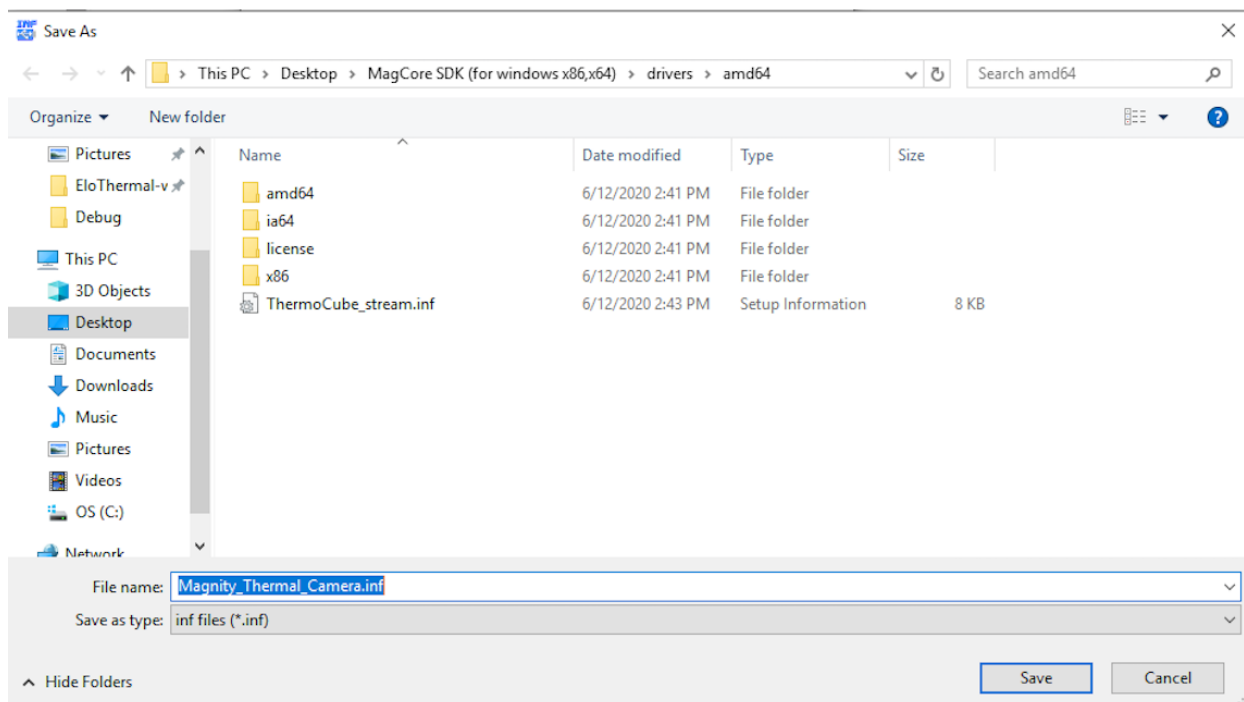

e. Press “Install Now”

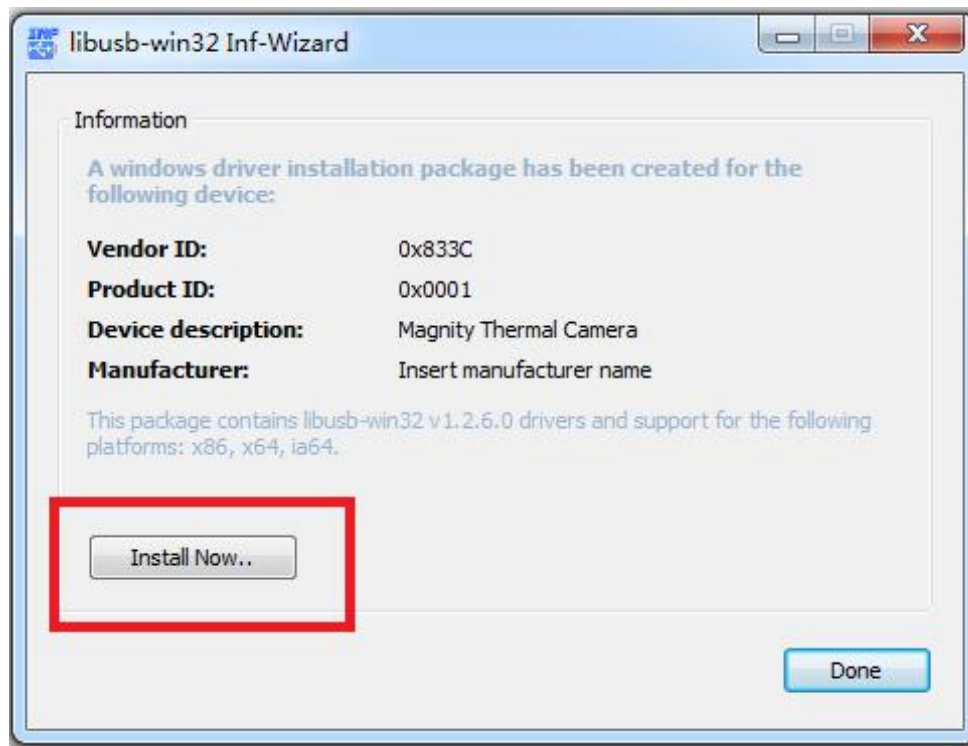

f. Finish installation and reset your computer.

